

TRAVELSCREEN



CARE & USE INSTRUCTION

- We highly recommend that two people assemble the screen.
- Dust, dirt and scratches on the projection surface will affect the picture quality, please take note of the points below to prevent that from occurring:
 1. Do not touch the projection surface with your hands
 2. Do not write or draw on the projection surface
 3. Do not use fingers or sharp objects to point on the projection surface; this will damage the screen material.
 4. Use a soft-damp cloth to clean the projection surface; do not use chemical cleaning agents or alcohol.
 5. Use clean water when dampening the cleaning cloth and do not rub against the material to clean it.
- After using the screen, disassemble it and store it in the flight case provided.
- To avoid damage and injury, the screen should only be operated by adults.

COMPONENTS




1. Fabrics front and rear
2. Knob Screw
3. Flight case


4. Frame
5. Legs

FRAME ASSEMBLY


1. Take the frame (1) out of the flight case (3) and place it on a flat surface. Fully unfold the longer sections first, as shown below.

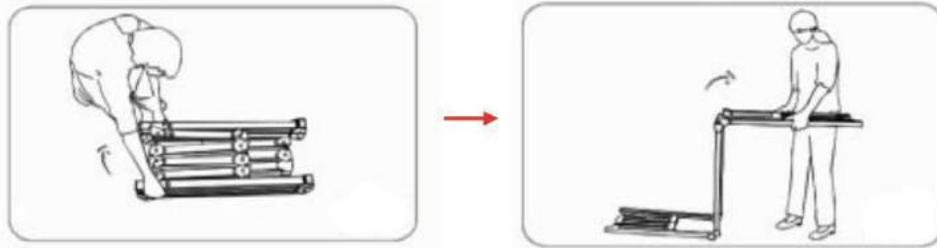

2. Next, unfold the frame until the latch on the hinge "clicks" into place. Repeat the procedure for the shorter sections, as shown below.

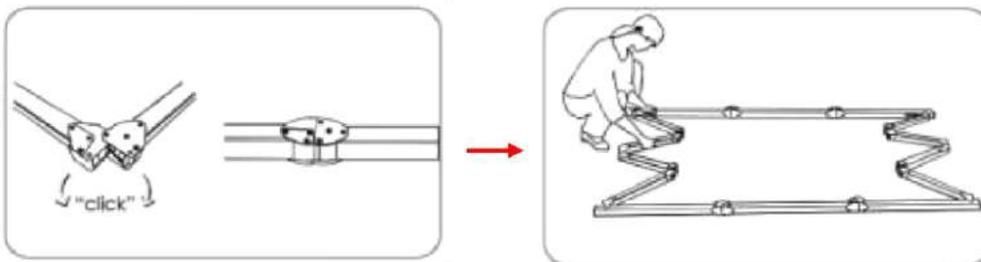


Note: When unfolding the frame and legs, be sure the latches on the hinges "click" into place. Please also make sure all 4 corners of the frame are at a 90° angle and the hinged support bar is straight and not bent.

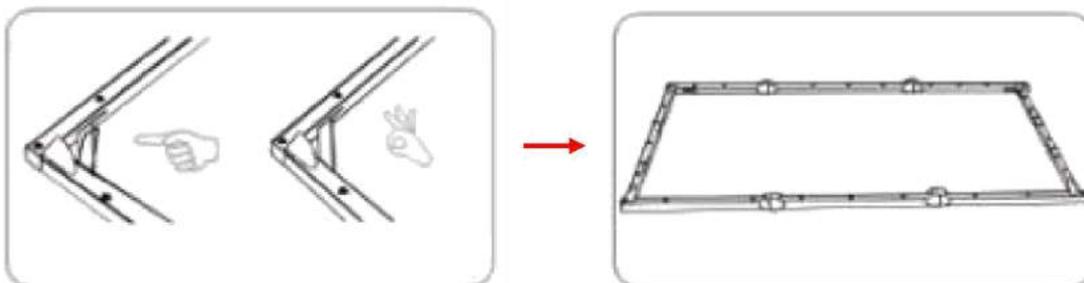

SCREEN MATERIAL ATTACHMENT

1. Take the screen material out of the screen material bag (E) and align the corners of the screen material with the inside corners of the frame.
2. Once the screen material is fully extended, secure the material by snapping the buttons onto the frame studs. Fasten the buttons in the following order as shown on Fig.1.


Note: Snap the buttons on each corner first, then work your way out to the center on each side.

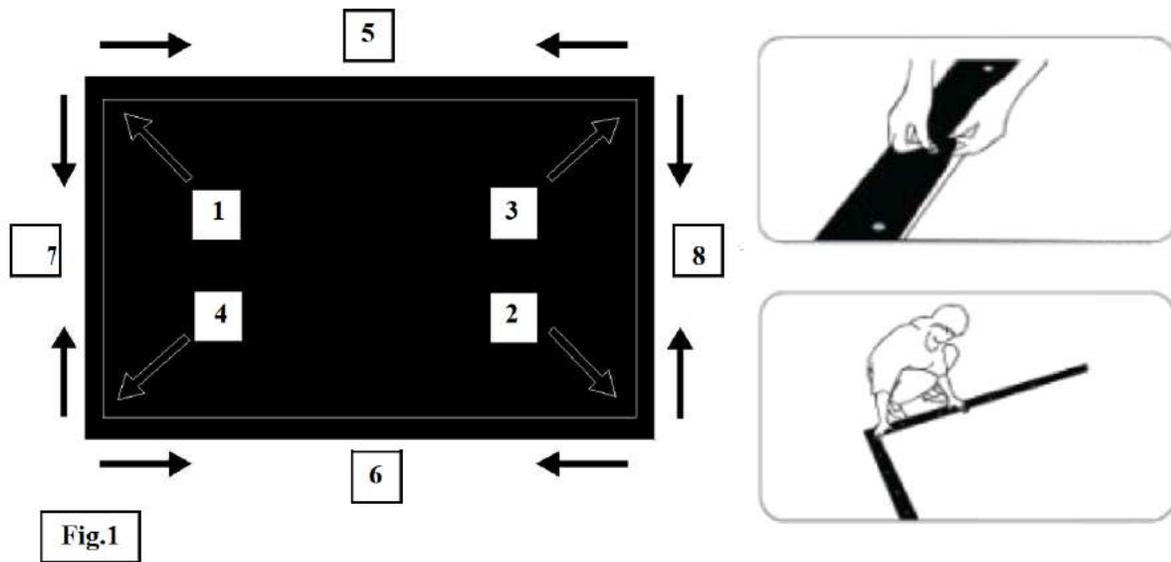

LEG ATTACHMENT FOR 93"/116" MODELS

1. Carefully take the left and right folding legs (B) out of the flight case (F) and place them on a flat surface. Unfold the left and right legs leaving the front foot folded as shown below. Make sure the hinges click into place.
2. Once the legs are unfolded, lay the frame on the floor and position the legs over both sides of the frame. Use the knob screws (C) to attach the frame to the legs.

After making sure the legs are secure to the frame, using two people, lift the screen up in a vertical position. While the screen is in a vertical position, fold the front feet of the legs out.

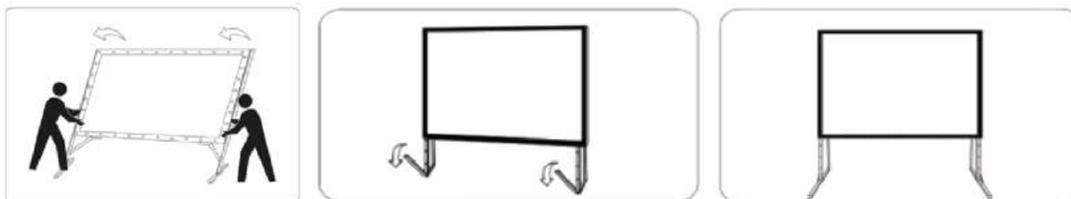


LEG ATTACHMENT FOR 139"/162"/185" MODELS

1. Starting from step 2 on the previous procedure, lay the frame on the floor and position the legs over both sides of the frame. Use the knob screws (2) to attach the frame to the legs.

Warning: When attaching the legs, make sure to screw the top of the leg to the last hole of the frame to reach max height. Attaching the legs lower to the frame and leaving an extra space on top may cause the screen to tip over when assembled.

2. Next, carefully unfold the extra support leg behind the leg and attach it securely using a knob screw (C). Then repeat steps 3 and 4 on the previous procedure.

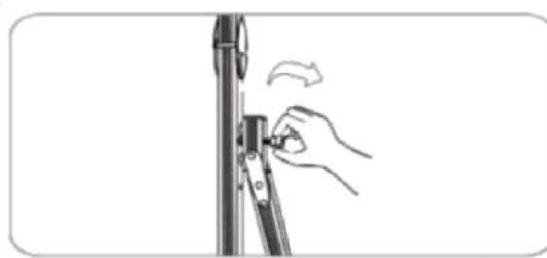

SCREEN DISASSEMBLY

1. After using the screen, disassemble and store it in the flight case (F). To disassemble the screen, follow the assembly procedure in reverse order.

2. Store the screen in the provided flight case (F). Be sure to place folding frame, legs, and smaller parts into the flight case first and place the material on top to keep material from creasing or tearing.